

Epson SC P400 Driver Recommendations

Please note that these settings are guidelines and can be adjusted to meet your individual preferences.

Getting Started: When making driver adjustments, be sure to use the "Epson SC-P400 Series"



Reminder: Driver changes should be made in both the **PRINTING DEFAULTS** and **PREFERENCES** settings.

	nt Sec	urity	Version Information	Color Man	agement	S	ecurity	Version Int	formation
General	Sharing	Ports	Advanced	General	Sh	aring	Ports	A	dvanced
Always available Available from	12:00 AM	To	12:00 AM		EPSON SC-I	9400 Serie	s		
iority: 1	×			Location:					
iver: EPSC	N SC-P400 Series		▼ New Oriver	Comment:				1	
Print directly to I	the printer			Features Color: Yes			Paper avail	ble:	
Hold mismatche	ed documents			Double-sid	led: Yes		Letter (8 1	/2 x 11 in)	
Print spooled do	coments first			Staple: No					
	cuments			Maximum I	resolution: Un	known			
Keep printed do	nrinting features						V		
Keep printee doo Enable advanced	printing reactives								

Select Setting:	Current Settings	▼ Save/Del	
Media Settings Media Type: Color:	Premium Presentation Paper Matte	Custom Settings	
Print Quality: Mode:	Speed EPSON Standard (sRGB)	 Advanced 	
Paper Settings Source: Size:	Sheet User Defined	User Defined	
Print Preview	er Ink Levels		<u>Diagram A</u> . Wh of my JetPak? the width of yo
Reset Defaul	ts	Version 6.75	simply measure edge of the car

Step 1: Under the Paper Settings, choose "User-Defined"

Step 2: In the pop-up, create a paper size called "JetPak". *Note*: You will need the width and height of your card stock to complete this task (see diagram A).



the width etermine tPak, leading ck that is



Step 3: Place the width and height of the JetPak in the correct

fields.

Step 4: Press "Save"

Step 5: The User-Defined Paper Size settings should now look like the image below, press "OK"

Base Paper Size:	Paper Size Name:					
User Defined	 Jetpak 	Jetpak				
Paper Size:	Enable Borderless pr	inting				
User Defined	Fix Aspect Ratio					
Jetpak	Not Specify	-				
	Base:	O Portrai				
	Paper Width:	4.00				
	(3.50 -	12.95)				
	Paper Height:	9.25				
	(5.00 -	590.55)				
	Unit Omm O	inch				

Step 6: Change the Media Type to "**Premium Presentation Paper Matte**"

Colort Catting	Current Settings		-	Save/Del
Select Setting:	Current Settings			Save/Del.
Media Setting				
Media Type:	Premium Presentation	Paper Matte	▼ Cus	tom Settin
Color:	Color		-	
Print Quality:	Speed		•	
Mode:	EPSON Standard (sRG	в)	•	Advanced.
Paper Settings	-			
Source:	Sheet		•	
Size:	Jetpak		- Us	ser Defined
2 - 47725547	Borderless			
		Ink Levels		
Print Preview				
🔲 Layout Mana	ger			
		Y M MK	R OR	PK GO
			it of	111 00

Step 7: The settings should look like the tab below

Main 11 Pa	age Layout // Utility	1			
Select Setting:	Current Settings	,	•	Save/Del	
Media Settings					
Media Type:	Premium Presentation	Cus	tom Settings		
Color:	Color	· · · · · · · · · · · · · · · · · · ·	•		
Print Quality:	Speed		•		
Mode:	EPSON Standard (sR	•	Advanced		
Paper Settings					
Source:	Sheet		•		
Size:	Jetpak		• U:	ser Defined	
	Borderless				
Print Preview		Ink Levels			
Layout Manag	er				
		Y M MK	R OR	PK GO C	
Reset Default	ts			Version 6.75	

Congratulations! You are now ready to print using your Epson SureColor P400 printer.